





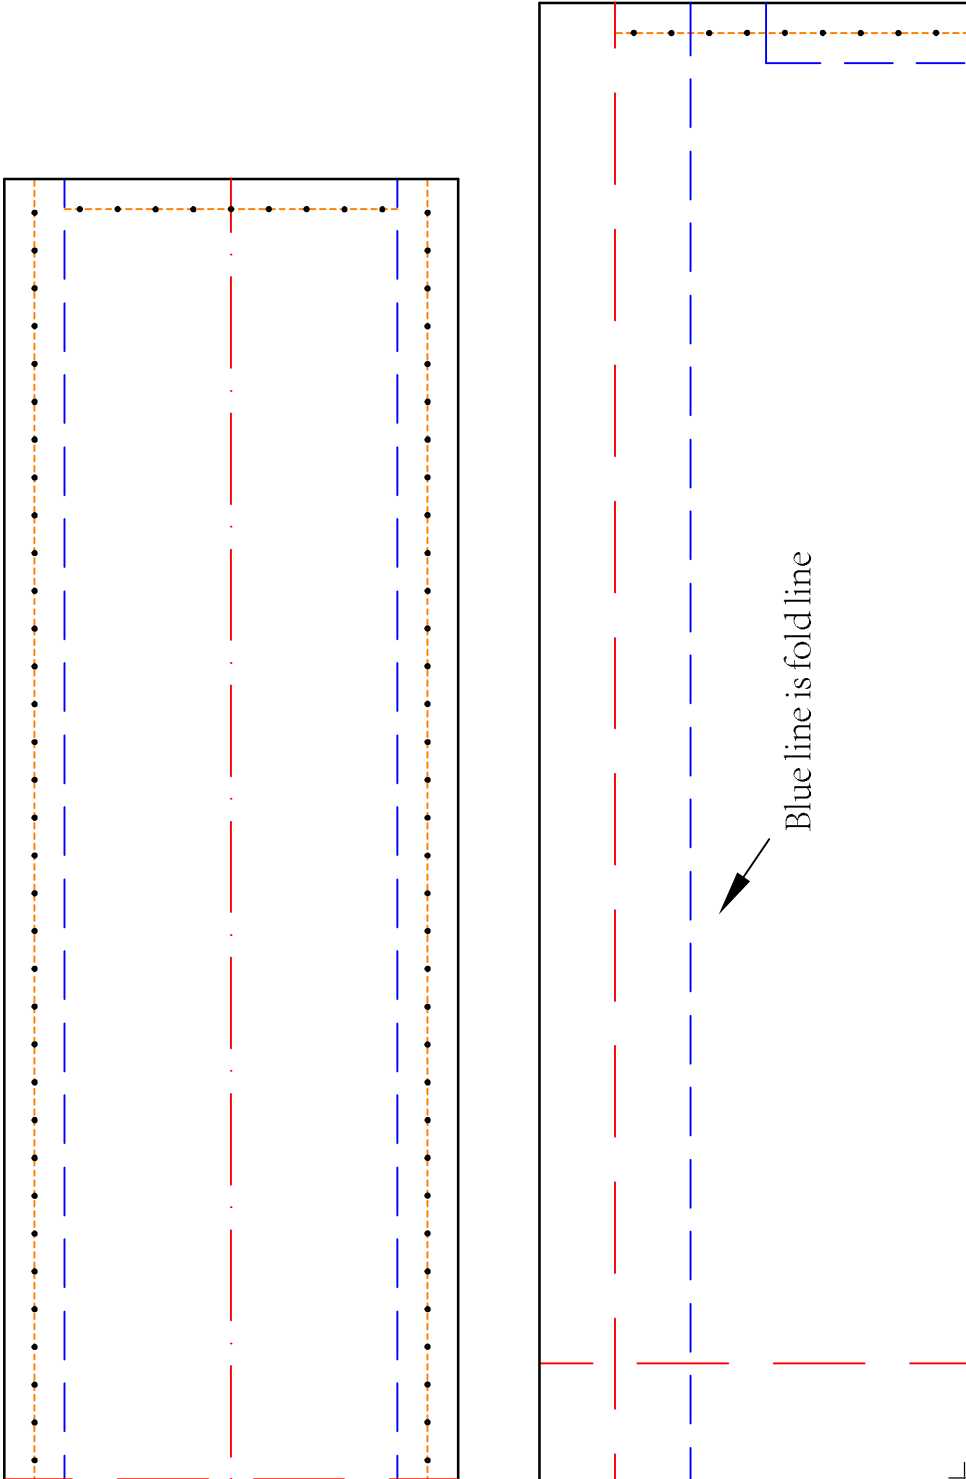


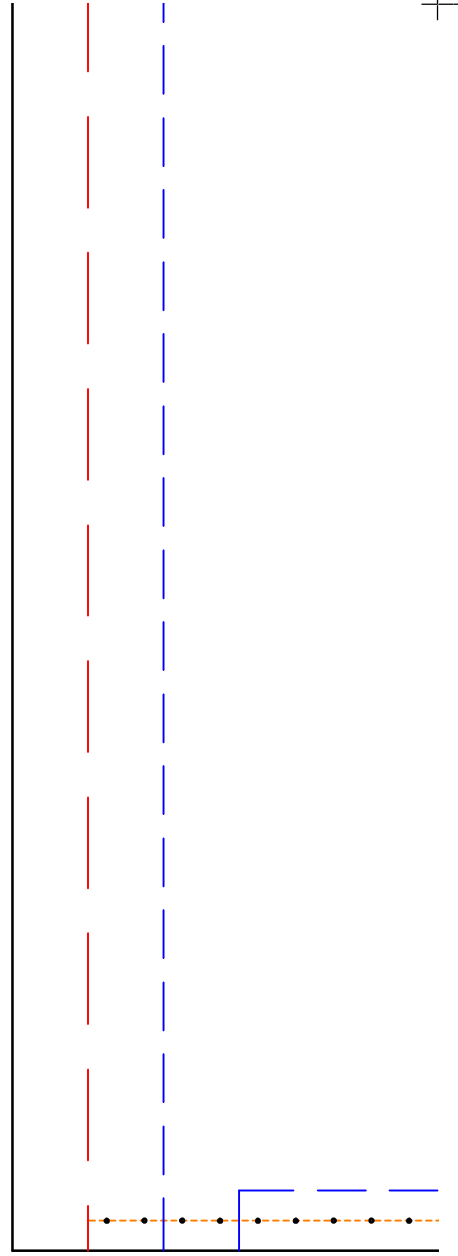


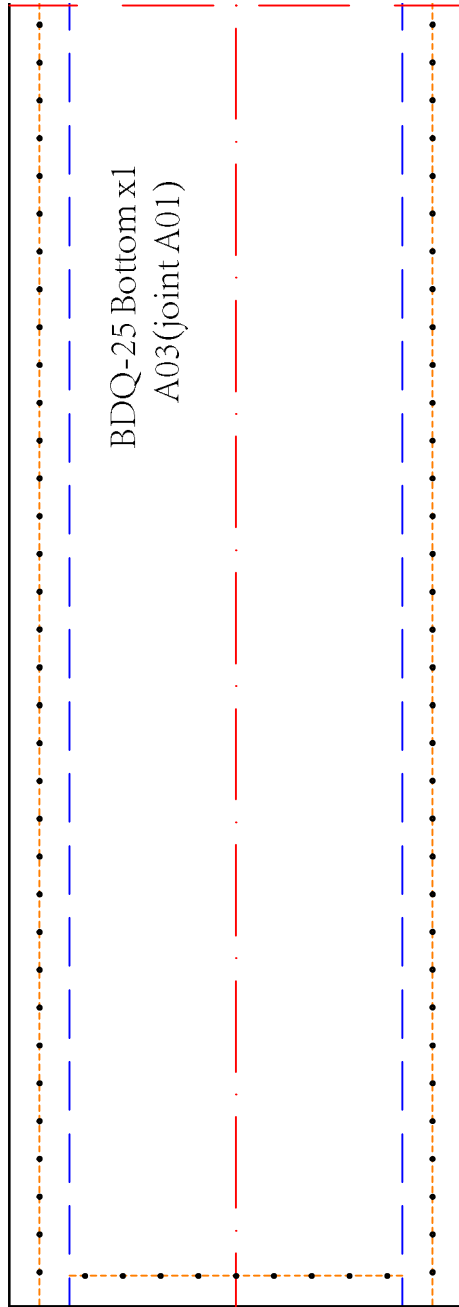



BDQ-25 Interlayer x2
A02(joint A01)

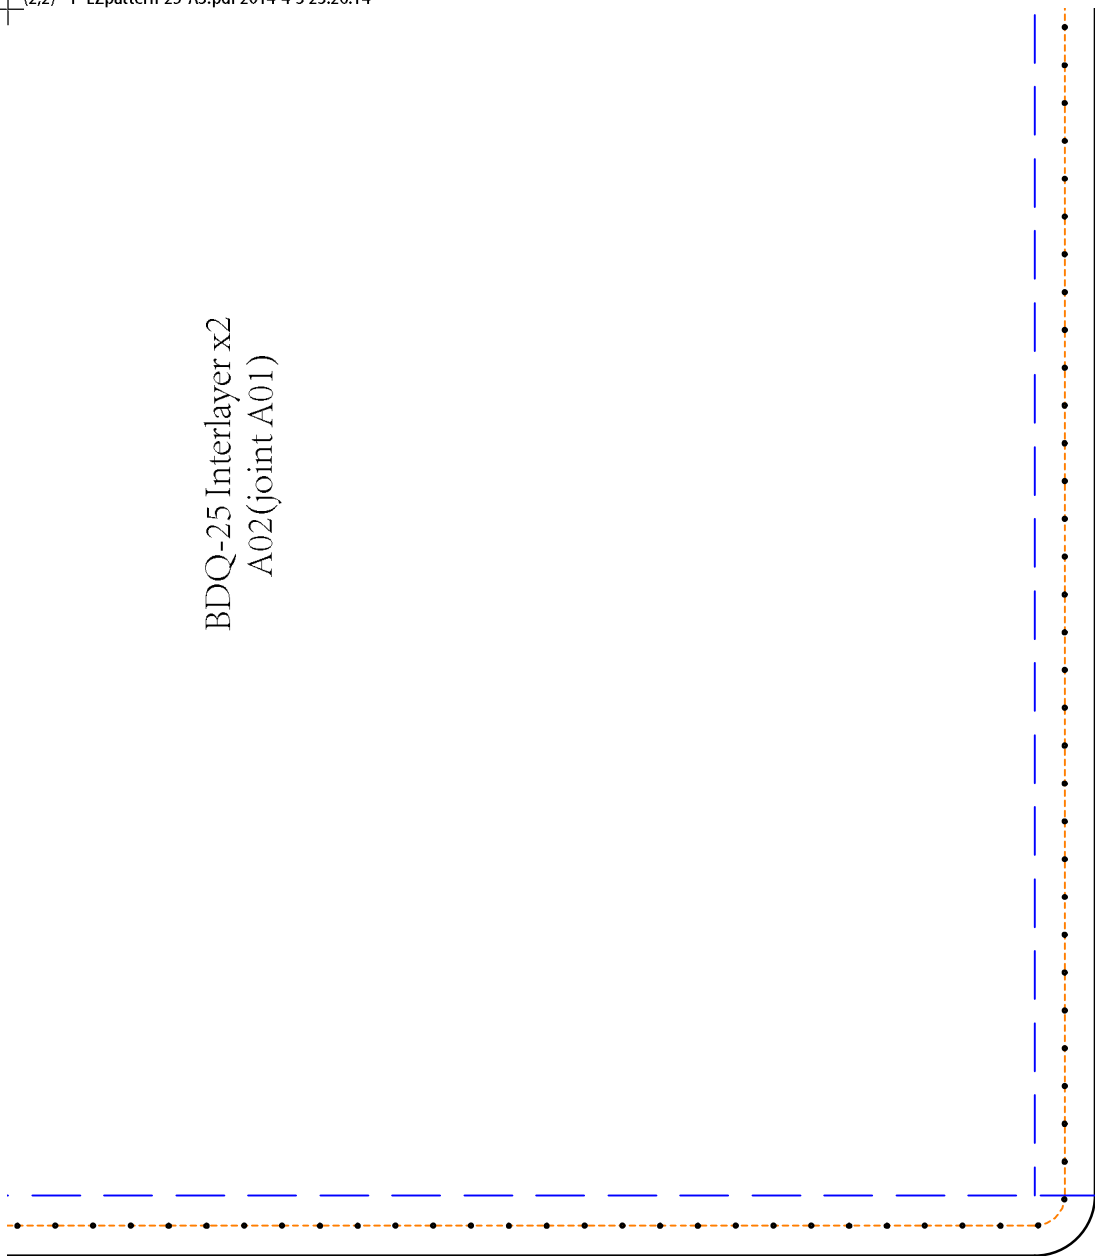

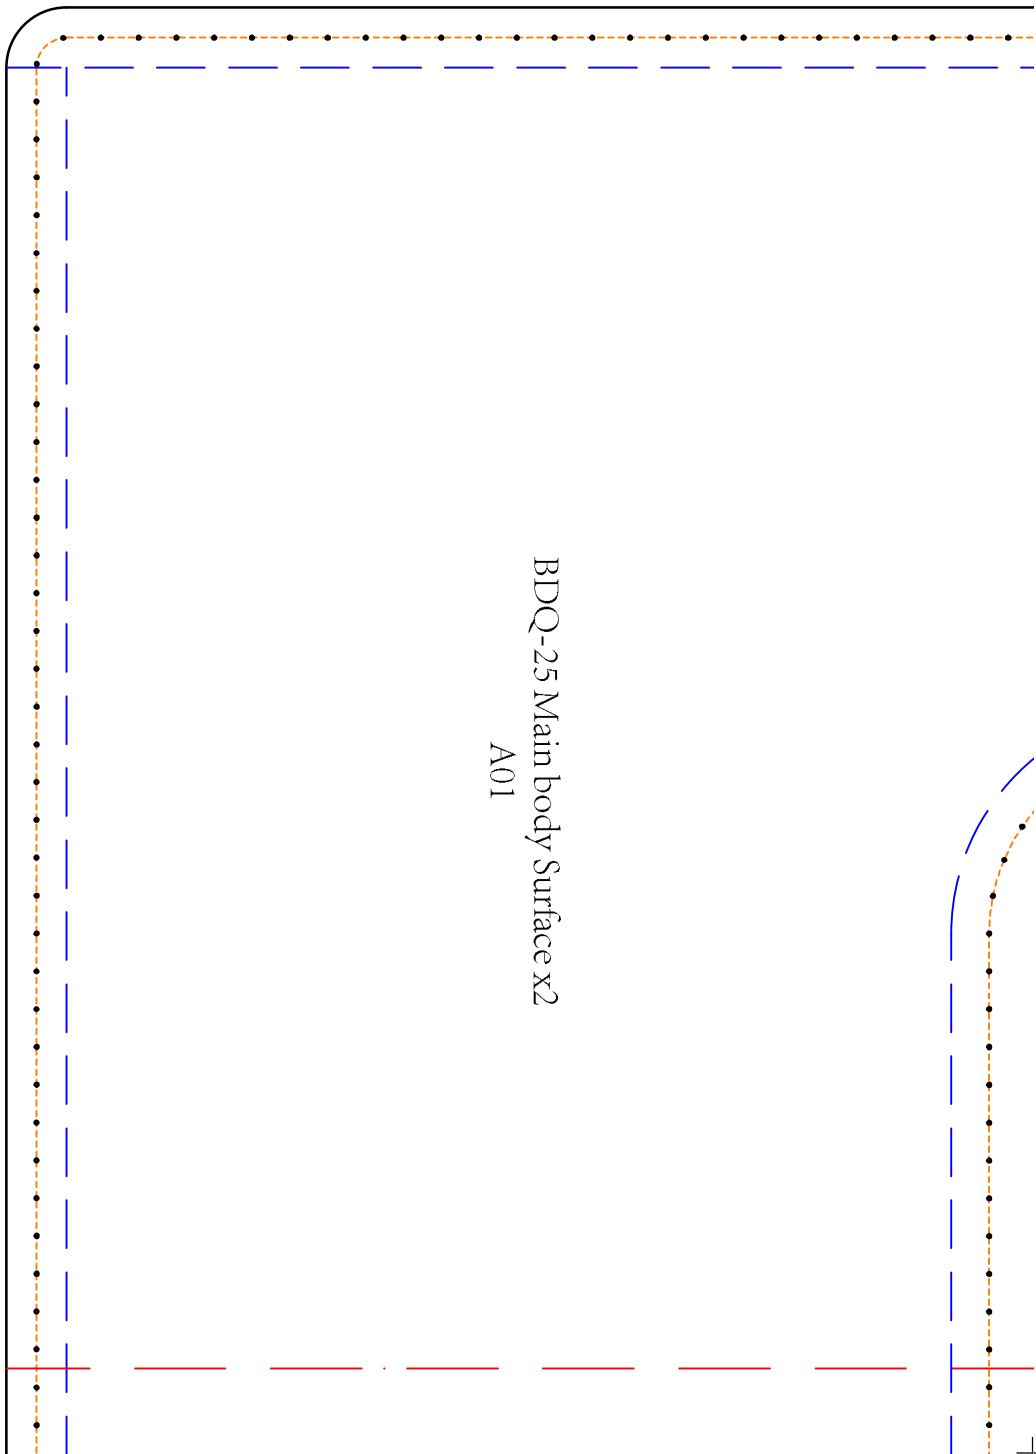



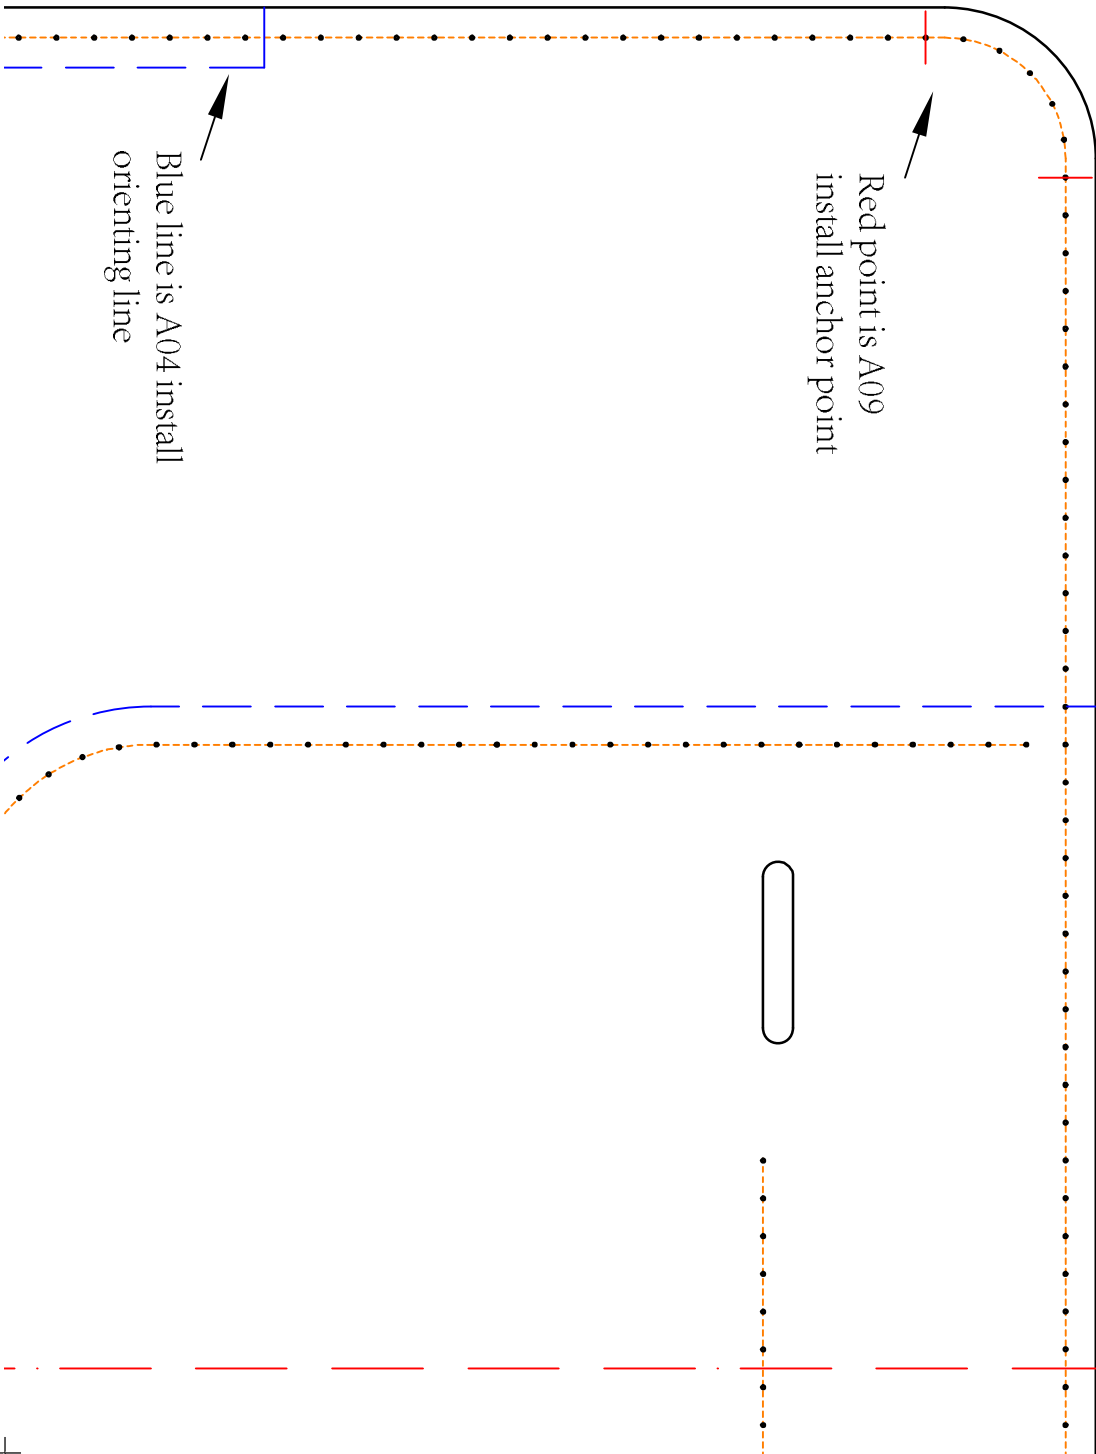



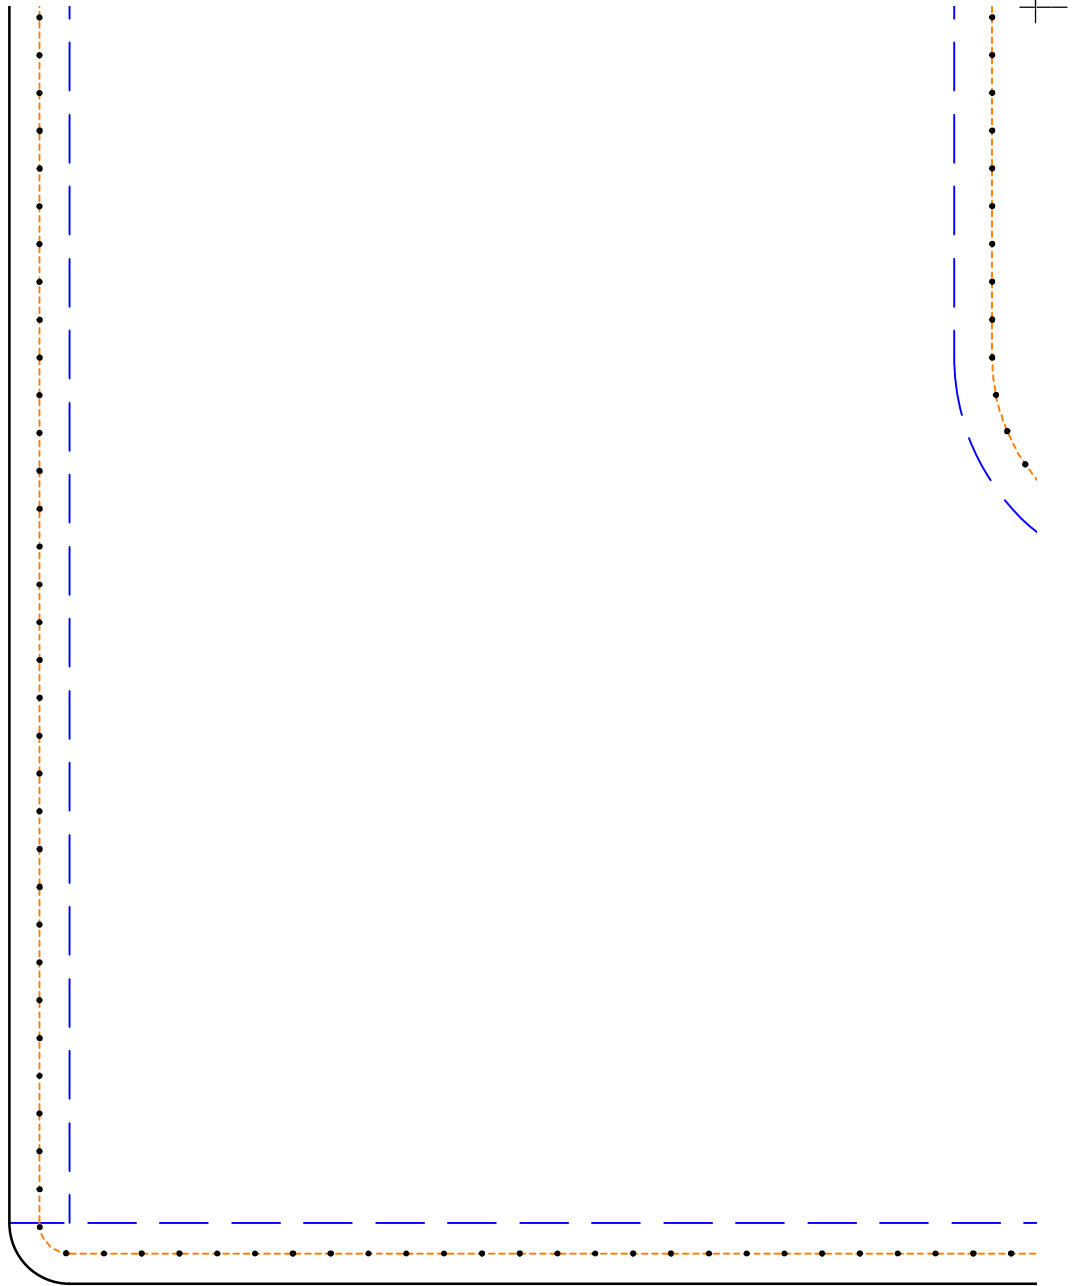


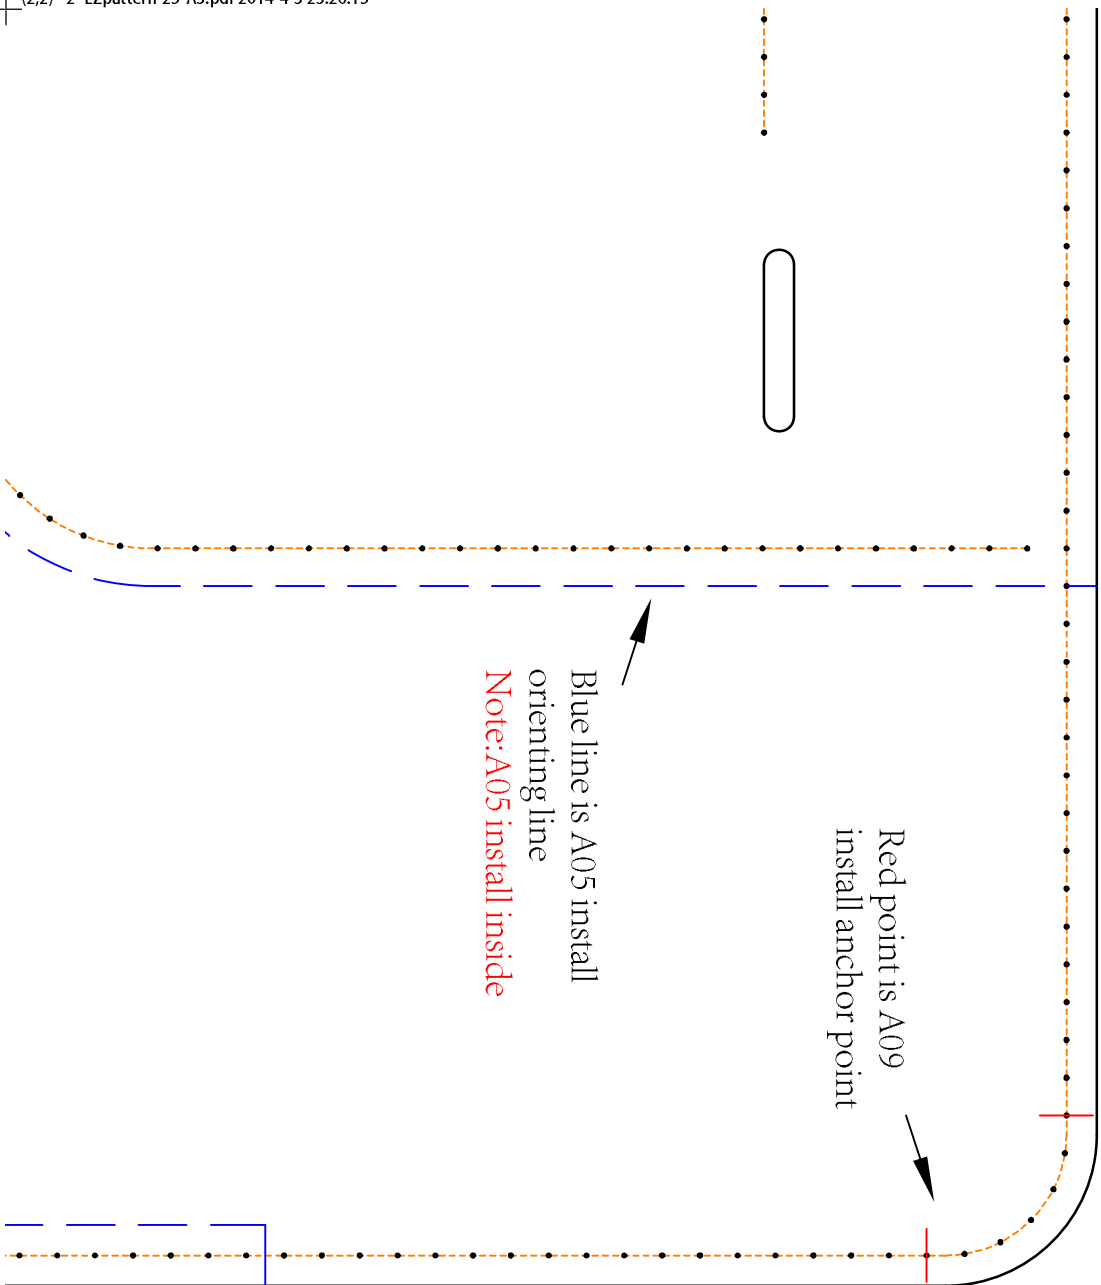




LZpattern BDQ-25 Brifecase A3 print 1:1

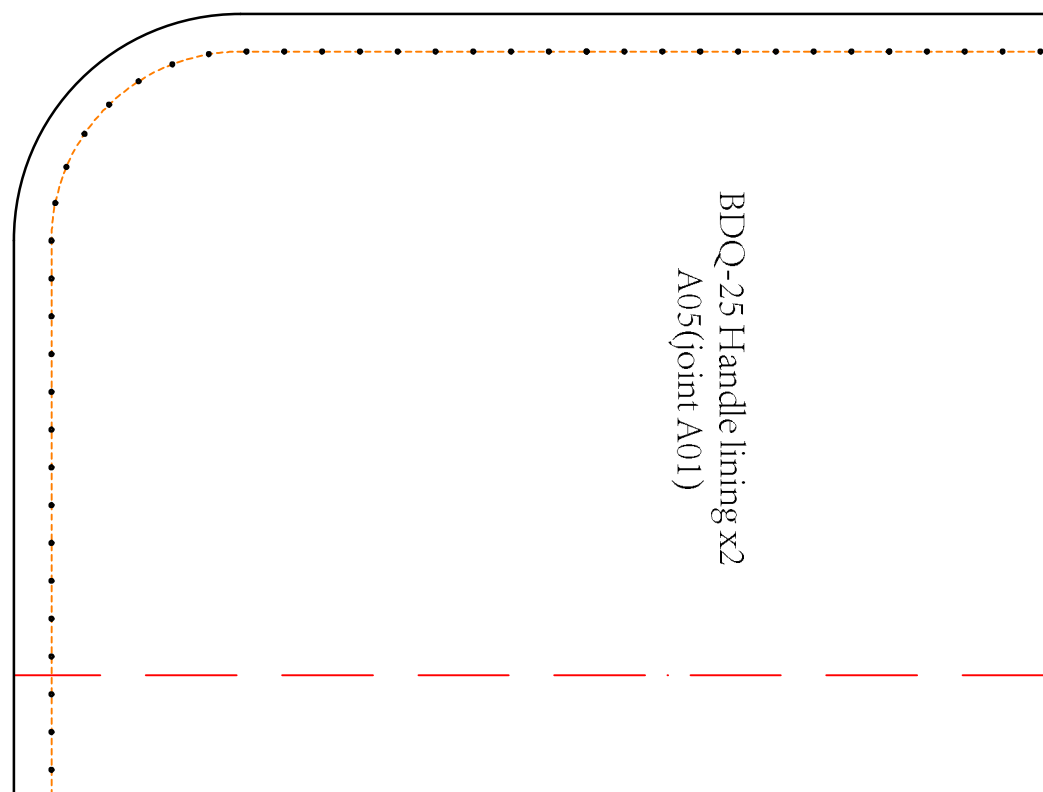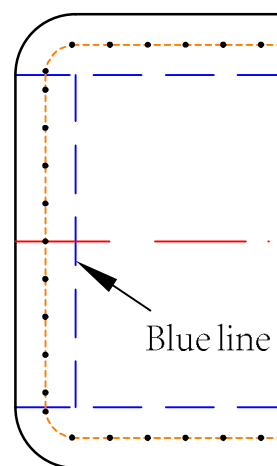
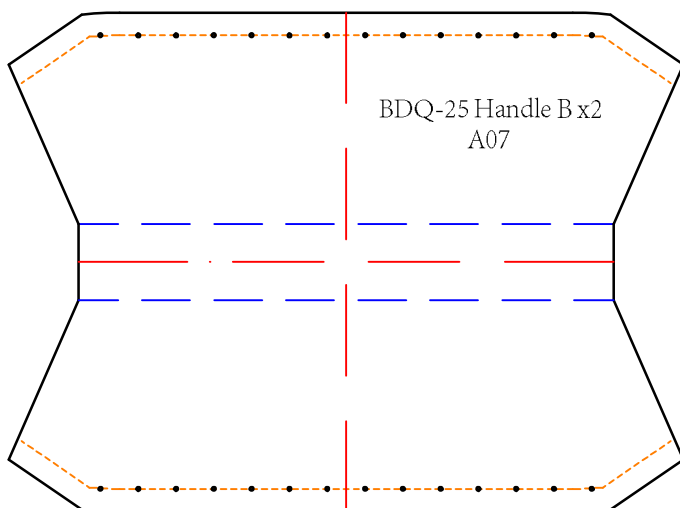


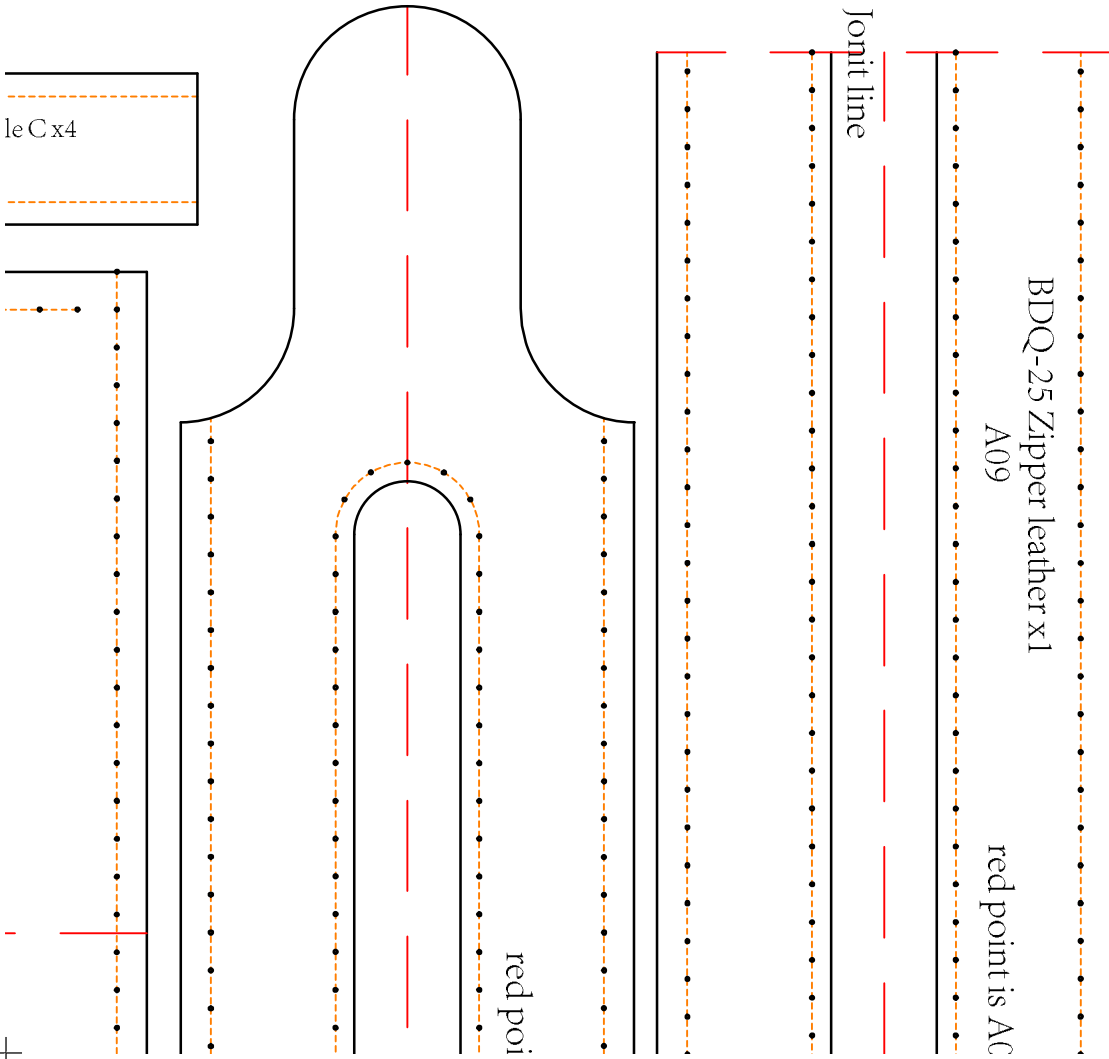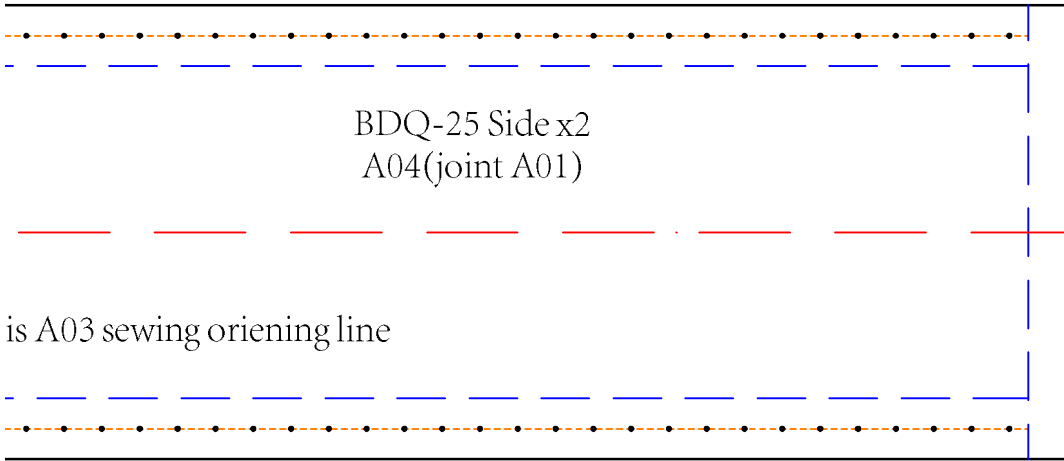

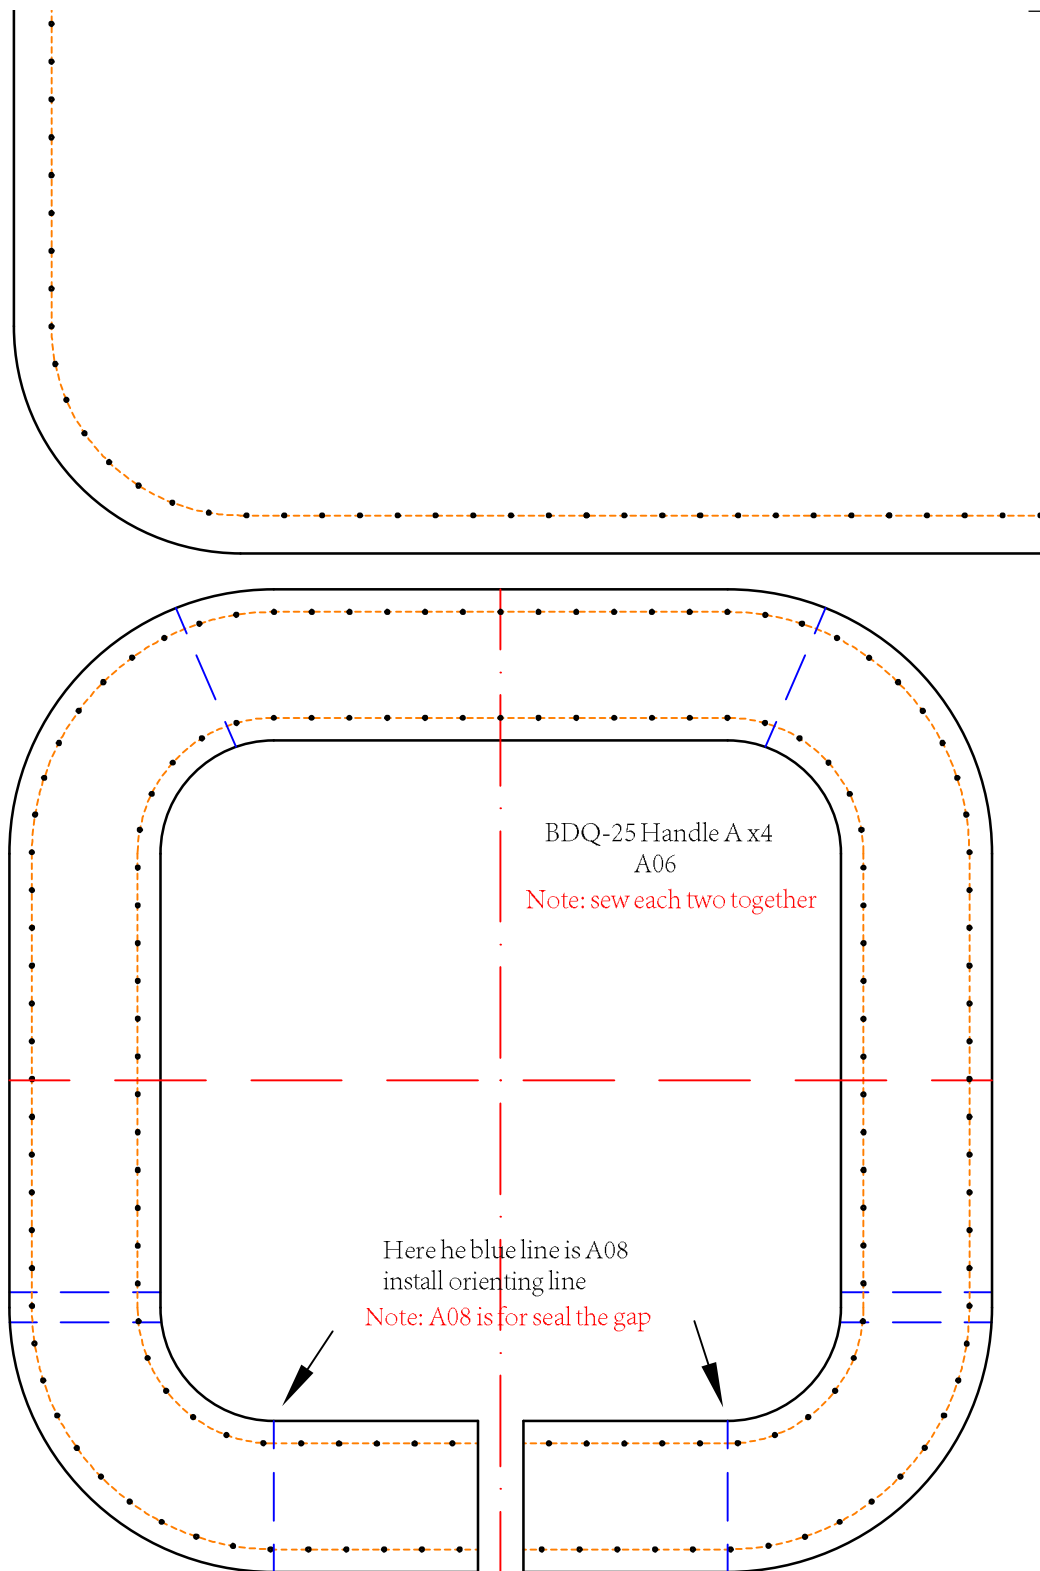




1) install anchor point

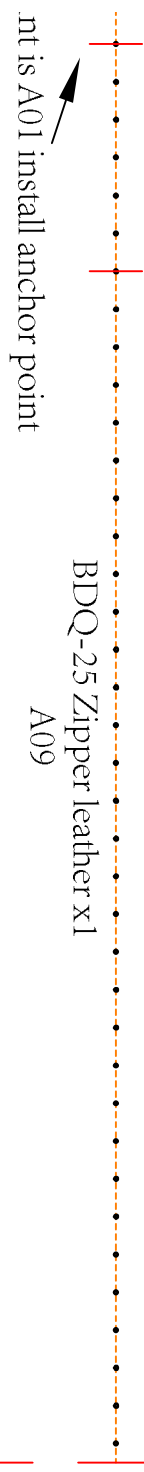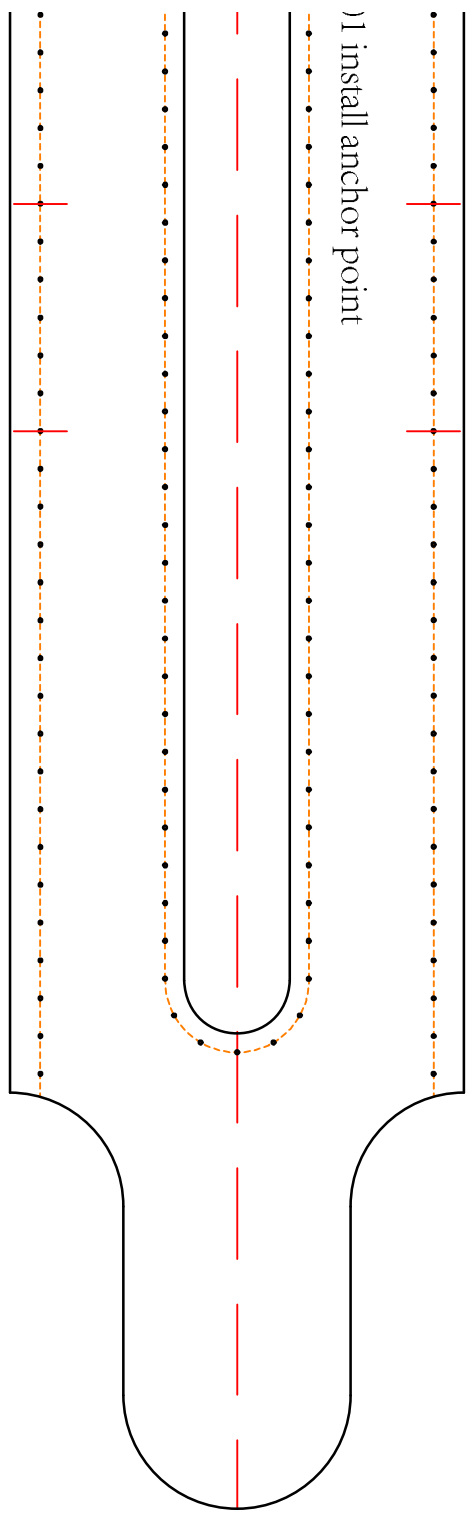

nt is A01 install anchor point

BDQ-25 Zipper leather x1
A09

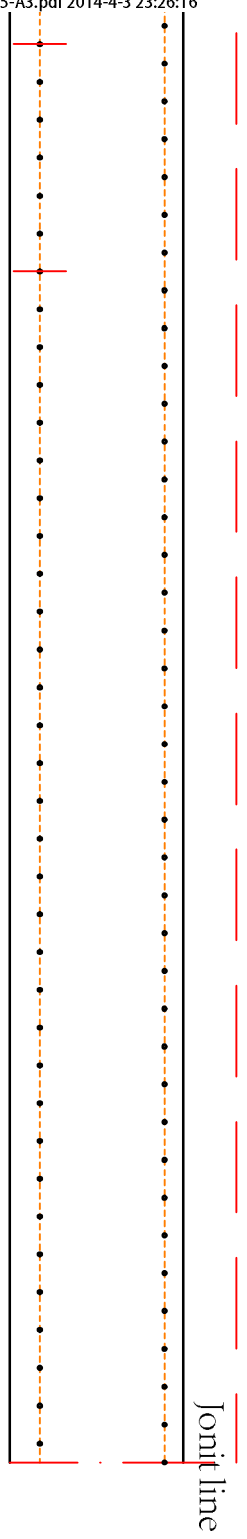

Joint line

