

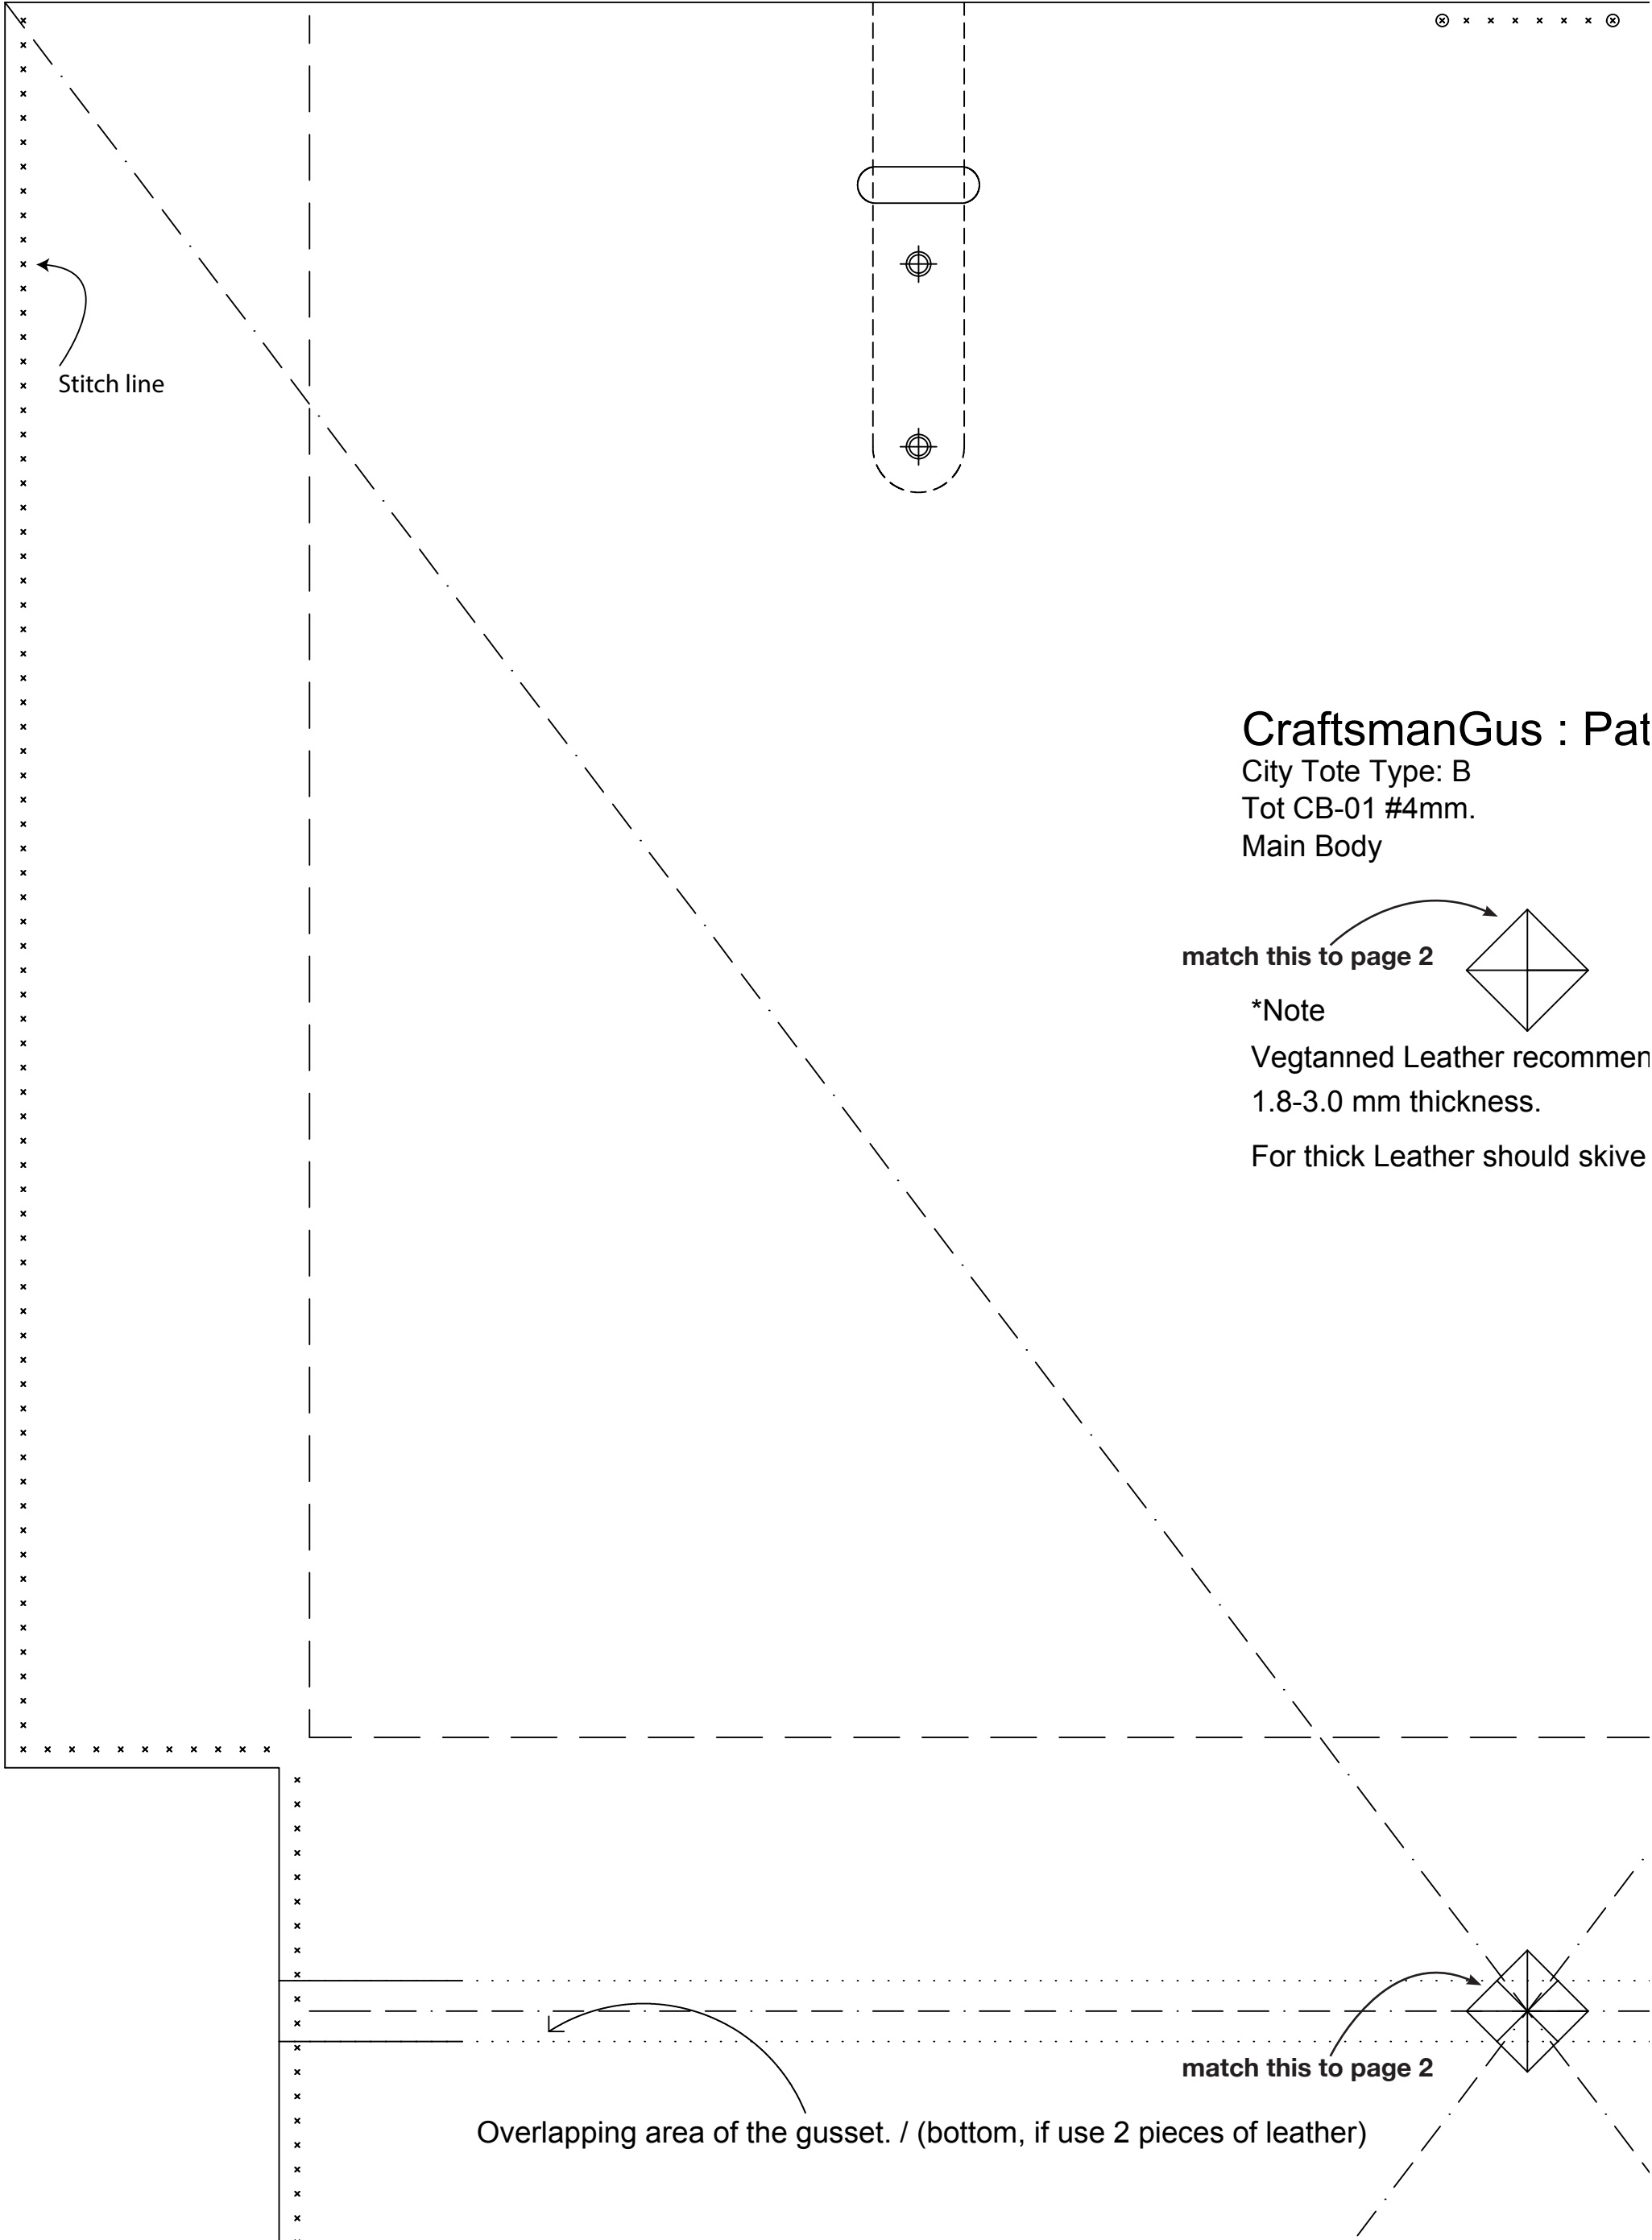


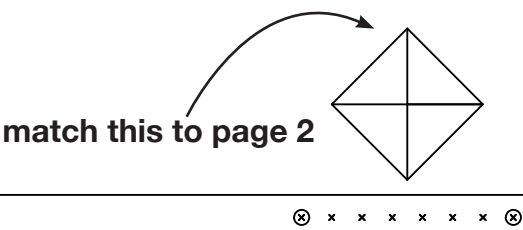

CraftsmanGus : Pat
City Tote Type: B
Tot CB-01 #4mm.
Main Body


match this to page 2

*Note
Vegtanned Leather recommen
1.8-3.0 mm thickness.
For thick Leather should skive

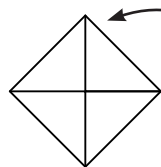

match this to page 1

⊗ x x x x x x x ⊗

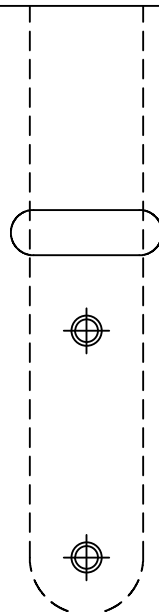


Stitch line

anGus : Pattern


pe: B
4mm.

X 2


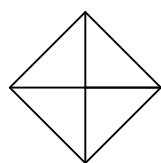


Leather recommended
thickness.


ather should skive the edge before stitch about 1.8 mm.

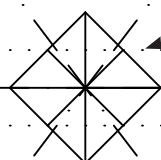


match this to page 1

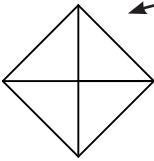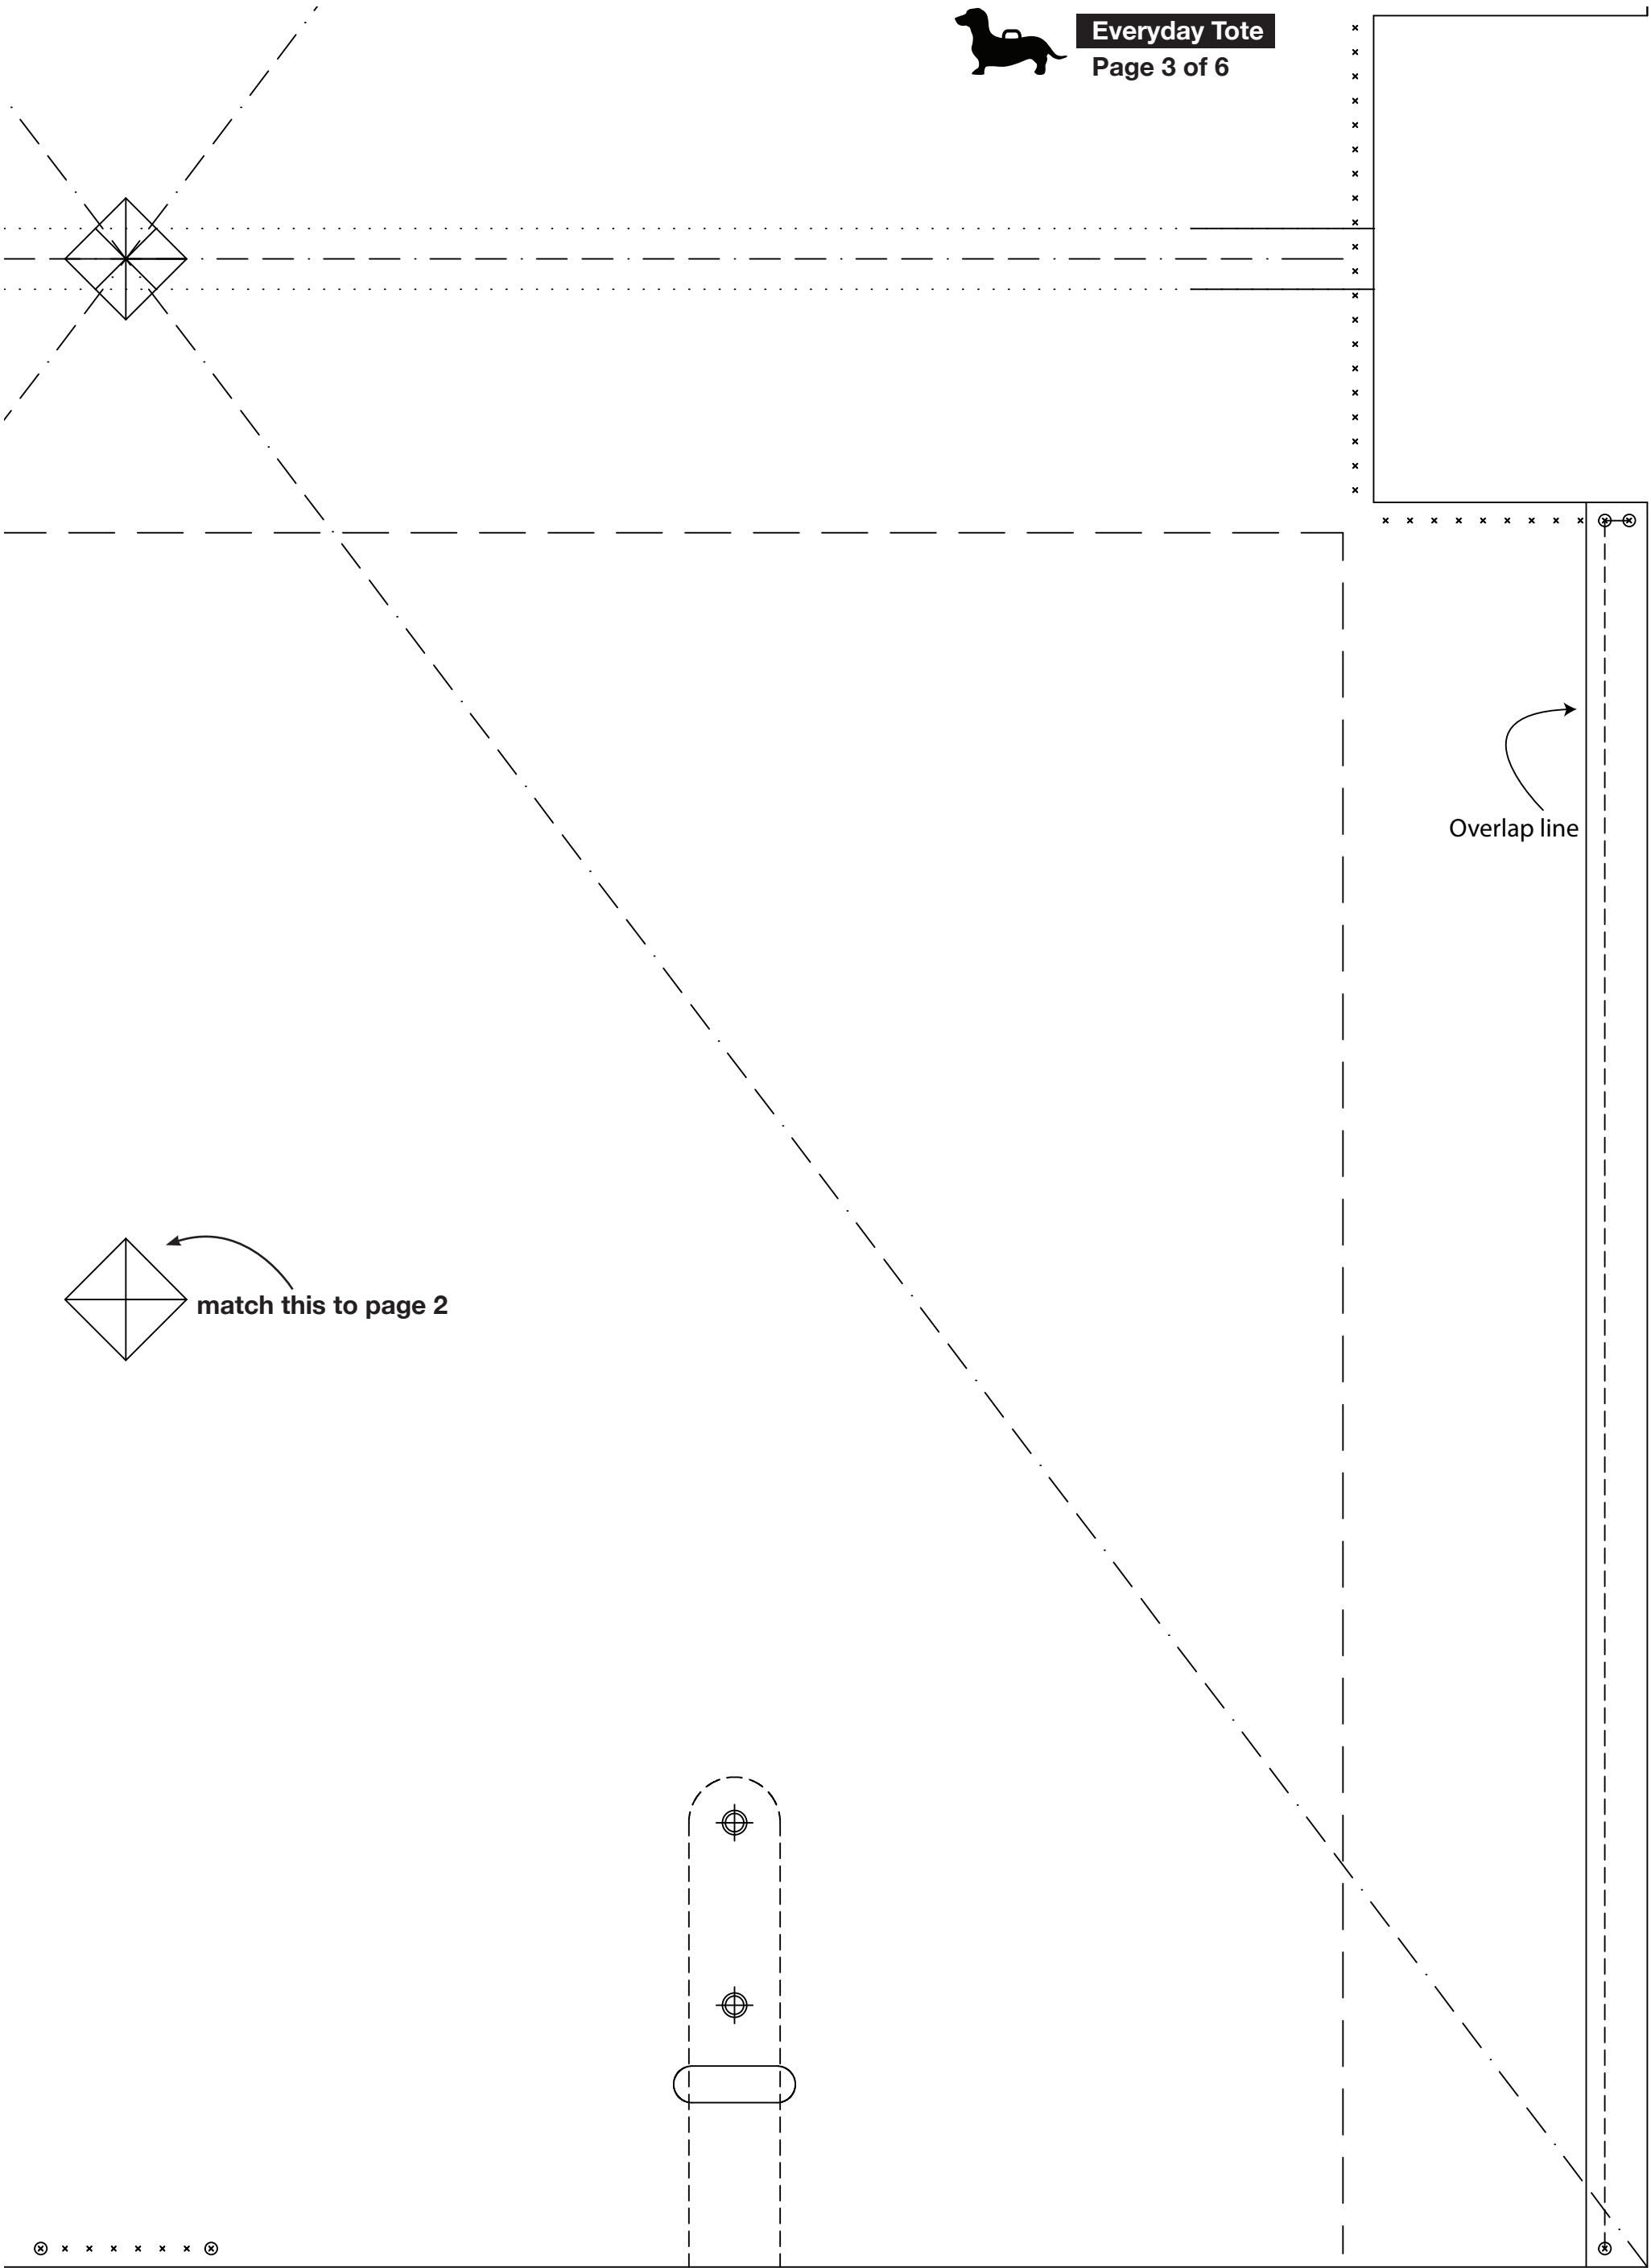

match this to page 2

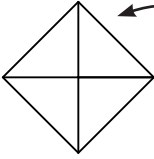

match this to page 2

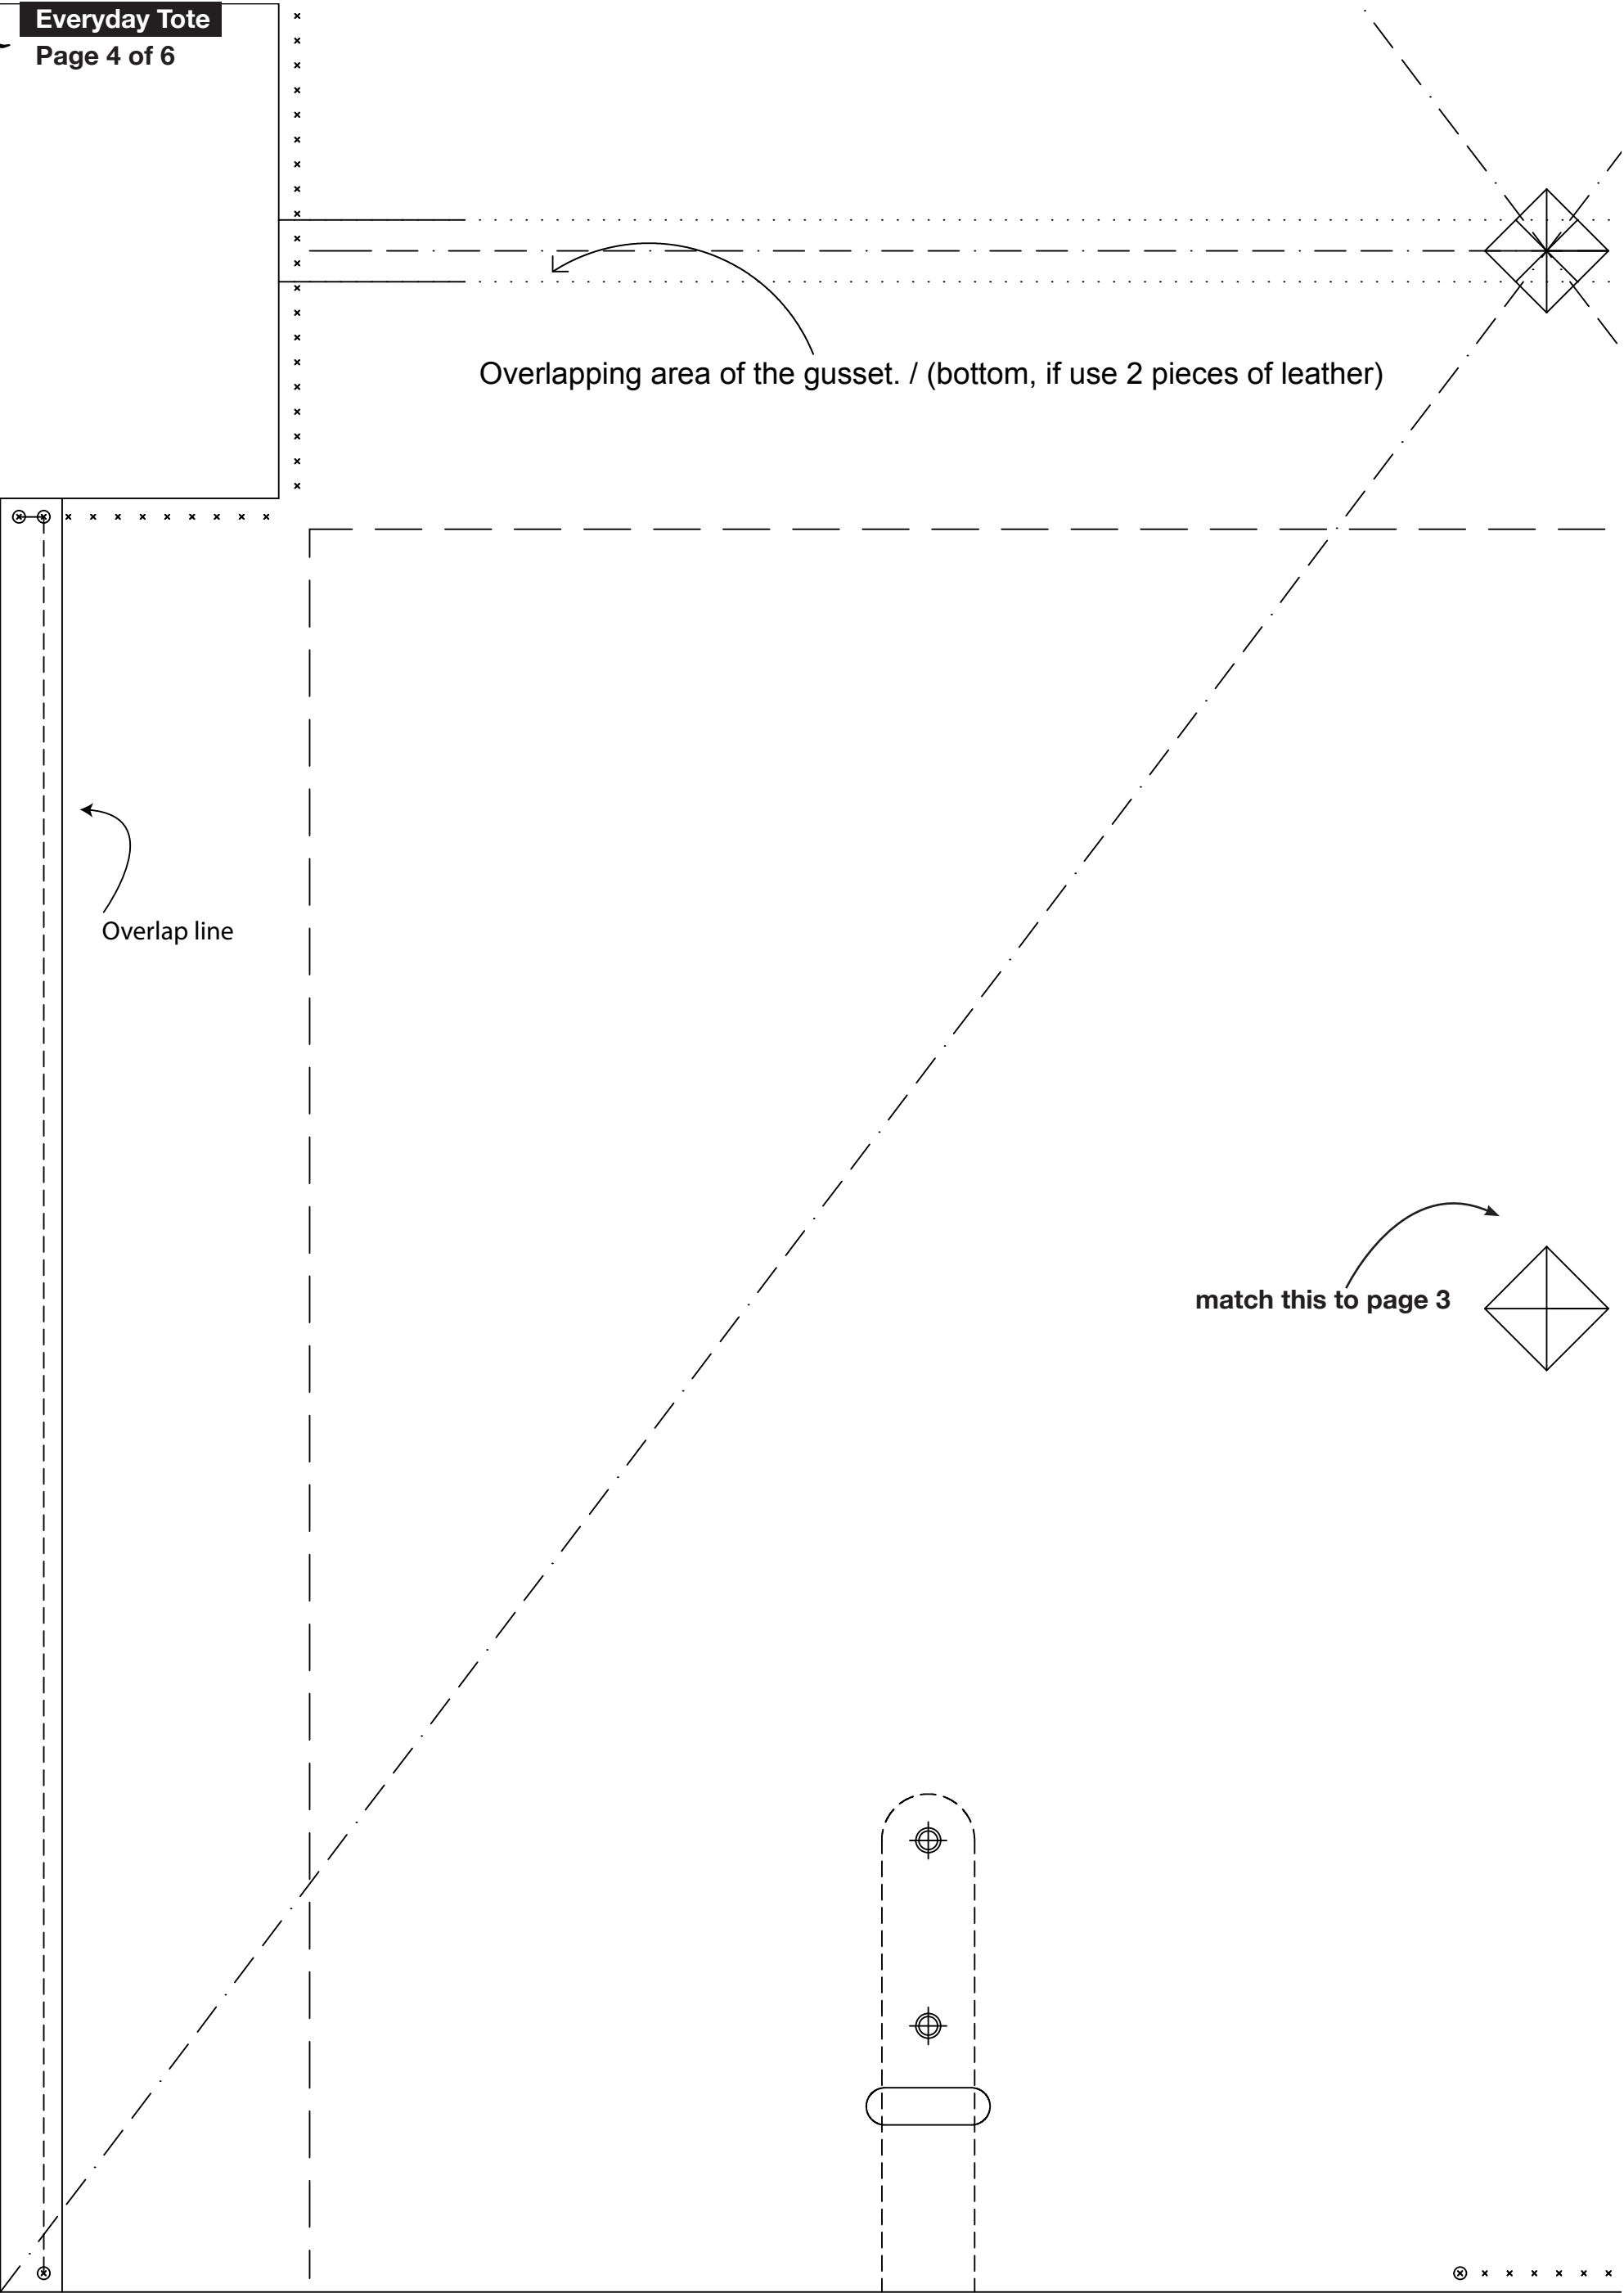

Overlapping area of the gusset. / (bottom, if use 2 pieces of leather)

Overlap line

match this to page 3

match this to page 3

